PURE

Siesta Mi

Series 2

Safety Instructions

1. Keep the radio away from heat sources.
2. Do not use the radio near water.
3. Avoid objects or liquids getting into the radio.
4. Do not remove screws from or open the radio casing.
5. Fit the mains adapter to an easily accessible socket, located near the radio and ONLY use the mains power adapter supplied.

Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at http://support.pure.com.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

Siesta Mi Series 2, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited.

Copyright

Copyright © 2012 Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited. Version 2 March 2012.

Disposal of Waste Electrical & Electronic Equipment

This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Contents

2 Getting started
2 Position aerial and connect power
3 Select language
3 Autotune
3 Navigating menus and options
3 Adjusting the volume

4 Overview of the controls and display

5 Listening to radio

6 Using radio presets

7 Using the alarms
7 Setting a radio alarm
8 Setting a tone alarm
9 Switching an alarm on/off
9 Snoozing a sounding alarm
9 Cancelling a sounding alarm

10 Using the sleep timer

11 Basic options
11 Changing the information shown on screen
11 Autotune
12 Setting the time and date
13 Changing the time format
13 Changing the snooze time
13 Changing the language

14 Advanced options
14 Version
14 Upgrade
14 Reset

15 Technical specifications

Getting started

Thank you for purchasing Siesta Mi Series 2. This manual should help you get your product up and running in no time and tells you how to use all the great features. If you need any further assistance, please visit the support pages on our website at www.pure.com.

Position aerial and connect power

1. Fully uncoil the aerial wire.
2. Hook the aerial wire underneath the cable guide on the base.
3. Connect the small end of the supplied mains cable into the Micro USB socket on the base.
4. Hook the mains cable underneath the cable guide on the base.
5. Position the aerial wire vertically.
6. Plug the mains adaptor into a live mains socket.
7. Siesta Mi will switch on.

Note: If 'Time not set' is displayed on the screen after Siesta Mi initially switches on, press **Standby**.

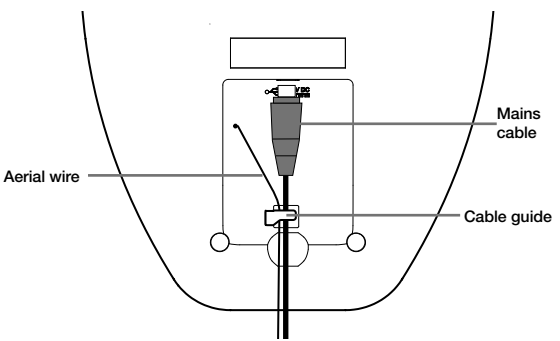



Select language

1. Press **Select**.
2. Use the scroll **< >** buttons to view the different language options.
3. Press **Select** to choose the language shown.

Autotune

Siesta Mi will perform an autotune for digital stations and tune to a station when complete. The number of stations found is displayed during an autotune.

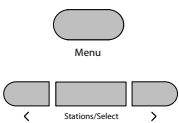

Navigating menus and options

To navigate and select menu options:

1. Press **Menu**.
2. Use the scroll **< >** buttons to scroll to the required option and press **Select** to access the option.
3. Press **Menu** again to exit all menus.

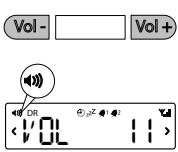

Adjusting the volume

Use **Vol +** and **Vol -** to adjust the volume level.

Overview of the controls and display

Controls

Source
Switch between Digital and FM radio

⏰1 / ⏰2
Set or cancel individual alarms

Presets
Store and select preset stations

Menu
Enter/exit options menu

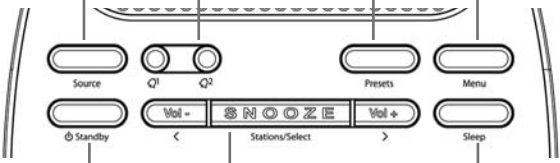

⏻ Standby
Switch between standby and on

< Stations/Select >
Browse and select radio stations
Scroll, change and confirm menu options

SNOOZE
Snooze an alarm

Vol +/-
Adjust the volume

Sleep
Set the sleep timer

Display

Source indicator
Displays the current radio source:
DR indicates digital radio
FM indicates FM

Sleep timer
Displayed when the sleep timer is set

Snooze indicator

Alarm indicators

Signal strength
Indicates the current signal strength

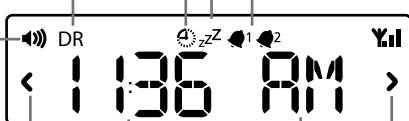

Text area
Displays menus, settings, station information and clock

AM/PM indicator

Volume/mute
Volume level

Scroll left/right
Displayed when scrolling is possible

Listening to radio



Selecting digital radio

Press **Source** until 'Digital' is displayed on the screen.







Changing stations

1. Press **Stations** so that the **< >** symbols are shown on the display.
2. Scroll **< >** to the desired station.
3. Press **Select** to tune into the station.



Selecting FM radio

Press **Source** until 'FM' is displayed on the screen.





Seek tuning

1. Press **Stations** so that the **< >** symbols are shown on the display.
2. Hold either the scroll up or scroll down **< >** button until Siesta Mi starts to automatically scan for the next station. The scan will stop when a station with a strong signal is found.

Manual tuning

1. Press **Stations** so that the **< >** symbols are shown on the display.
2. Scroll **< >** to the required frequency.

Using radio presets

Store up to 8 digital and 8 FM radio stations for quick access and for use as options as radio alarms.







Storing a radio preset

1. Tune into the station that you want to store.
2. Press **Presets** so that the **< >** symbols are shown on the display.
3. Scroll **< >** to the required Preset (1-8).
4. Press and hold **Presets** or **Select** to store the radio station as a preset.

Note
To overwrite a radio preset, tune into the station that you want to store and follow the above steps.



Selecting a radio preset

1. Press the **Presets** button.
2. Scroll **< >** to the station that you want to listen to.
3. Press **Select** to tune to the station.

Using the alarms

Siesta Mi has two alarms. The alarms switch the radio on (if in standby) and tune to a digital or FM radio station or sound a tone.

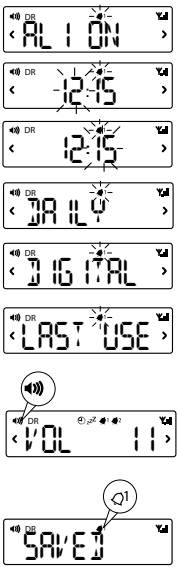

Setting a radio alarm

1. Press the ⏰1 or ⏰2 button.
2. Scroll **< >** to 'On' and press **Select**.
3. Scroll **< >** to set the hour for the alarm and press **Select**.
4. Scroll **< >** to set the minute for the alarm and press **Select**.
5. Scroll **< >** to specify one of the following alarm frequency options: 'Daily', 'Once', 'Weekends' and 'Weekdays' and press **Select** to confirm.
6. Scroll **< >** to specify 'FM' or 'Digital' and press **Select** to confirm.
7. Scroll **< >** to specify which station should be played when the alarm goes off. You have the option of selecting one of your preset stations or you can select 'Last Used' to select the station that you were last listening to. Press **Select** to confirm.
8. Use **Vol +** and **Vol -** to set the volume the radio will play at when the alarm sounds and press **Select** to confirm.
9. One of the alarm icons will appear on the display to show that an alarm is set.

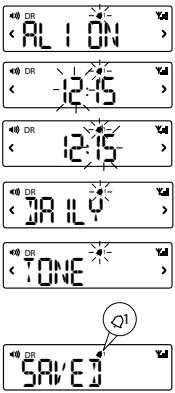

Setting a tone alarm

1. Press the ⏰1 or ⏰2 button.
2. Scroll **< >** to 'On' and press **Select**.
3. Scroll **< >** to set the hour for the alarm and press Select.
4. Scroll **< >** to set the minute for the alarm and press Select.
5. Scroll **< >** to specify the alarm frequency and press **Select** to confirm. The available options are:
   - Daily
   - Once
   - Weekends
   - Weekdays
6. Scroll **< >** to specify 'Tone' and press **Select** to save the alarm. One of the alarm icons will appear on the display to show that an alarm is set.

Switching an alarm on/off

1. Press the button of the alarm (⏰1 / ⏰2) to toggle the alarm on/off.
2. Press **Select** when the screen displays the option that you want to set.
3. One of the alarm icons will appear when an alarm is set.

Snoozing a sounding alarm

1. Press the **Snooze** button to snooze a sounding alarm for the specified time (default 9 mins). See page 13 for more information on setting the snooze time.The snooze icon will display on the screen.
2. The alarm will reactivate after the snooze time has expired.

Cancelling a sounding alarm

1. Press **Standby** or the ⏰1 or ⏰2 button.
2. The screen will display 'AL1 OFF' or 'AL2 OFF' to indicate that the alarm has been cancelled.

Note

If you do not cancel or snooze a sounding alarm, the alarm will automatically switch off after sixty minutes.

Using the sleep timer

You can use the sleep timer to switch off the radio after a specified period of time.

1. Press **Sleep** until the time you want to set the sleep timer to (15-90 minutes) is displayed on the screen.

2. Press **Select** to set the sleep timer screen.
3. The sleep timer icon will appear when a sleep timer is set.

Note

To cancel the sleep timer function, scroll until 'SLP OFF' is displayed on the screen using the above steps.

Basic options

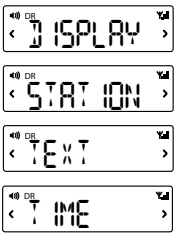

Changing the information shown on screen

1. Press **Menu.**
2. Scroll **< >** to 'Display' and press **Select**.
3. View the options using the scroll buttons:

Station Displays the station name.

Text Displays the scrolling text from the radio station.

Time Displays the time.

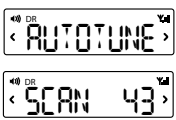

Autotune

You can use the autotune function to automatically scan for new digital radio stations and remove inactive ones.

Note
Autotune is only visible when you have selected 'Digital' as the radio source.

1. Press **Menu**.
2. Scroll **< >** to ' 'Autotune' and press **Select**.
3. The number of stations found will be displayed during the autotune.
4. When the autotune has finished, Siesta Mi will tune to the last station that you were listening to.

Setting the time and date

The time and date on Siesta Mi are automatically set by the FM or digital radio signal. If the time/date does not update automatically, you can manually set it using this option.

Note
Any time or date updates received by an FM or a digital broadcast will override manual settings.

To set the time/date manually:

1. Press **Menu**.
2. Scroll **< >** to 'Clock'.and press **Select**.
3. Scroll **< >** to 'Set Time' and press **Select**.
4. Scroll **< >** to set the hour and press **Select**.
5. Scroll **< >** to set the minute and press **Select**.
6. Scroll **< >** to set the day of the month and press **Select**.
7. Scroll **< >** to set the month and press **Select**.
8. Scroll **< >** to set the year and press **Select** to save your changes.

Changing the time format

1. Press **Menu**.
2. Scroll **< >** to ‘Clock’ and press **Select**.
3. Scroll **< >** to ‘12/24 Hr’ and press **Select**.
4. Scroll **< >** to the required time format and press **Select**.



Changing the snooze time

1. Press **Menu**.
2. Scroll **< >** to ‘Clock’ and press **Select**.
3. Scroll **< >** to ‘Snooze’ and press **Select**.
4. Scroll **< >** to adjust the Snooze time and press **Select** to save your changes.

Changing the language

1. Press **Menu**.
2. Scroll **< >** to ‘Language’ and press **Select**.
3. Scroll **< >** to the required language and press **Select** to save your changes.

Advanced options



Version

Press and hold **Menu** to display the software version on the screen.

Upgrade

Contact Pure technical support (**http://support.pure.com**) for more information on how to update Siesta Mi to the latest software version.







Reset

Resetting your Siesta Mi removes all presets, stored stations and alarm/timer settings and resets all other options to default settings.

To reset Siesta Mi to default settings:

1. Ensure your aerial is fully extended and vertical.
2. Press and hold **Menu** until you see the firmware version number on screen.
3. Scroll **< >** to 'Reset' and press **Select.**
4. Press **Select** again to confirm that you want to reset the Siesta Mi to default settings.

Technical specifications

Radio	Digital and FM. UK products receive DAB and FM; non-UK products receive DAB/DAB+/ DMB-Radio/FM depending on region
Audio	1W RMS Full-range 2.5” drive unit
Connectors	5V Mini USB power adapter socket (also for software updates)
Dimensions (mm)	50 high x 145 wide x 146 deep
Power	100-240V AC to 5V (800mA) DC Mini USB external power adapter
Power Consumption	Standby:<1W
Approvals CE	CE marked. Compliant with the EMC and Low Voltage Directives (2004/108/EC and 2006/95/EC) ETSI EN 300 401 compliant

Pure Warranty Statement for Australia
This statement replaces any reference to warranty which may be contained elsewhere within this manual.
What do you need to do now?
Option 1: You can register your purchase on-line at https://www.pure.com/au/register/register.asp
Option 2: Or you can do nothing other than keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.
If you have any questions about your warranty you can call us toll free: 1800 988 268
What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a two year warranty period applies.

How do you make your claim?
Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to: http://support.pure.com/au/ and complete the contact us form.

What's NOT covered by this warranty?
Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.

- Replacement of parts due to normal wear and tear
- Products with serial number defacement, modification or removal
- Water damage or corrosion caused by dampness
- Any damage or deterioration due to shipments
- Any damage or deterioration due to shipment
- Any product which has been subjected to misuse, abuse or accident

Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202

Pure
Imagination Technologies Ltd
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom
http://support.pure.com

Pure Australasia Pty Ltd
PO Box 5049
Wonga Park
Victoria 3115
Australia
sales.au@pure.com
http://support.pure.com/au

PURE

www.pure.com
www.thelounge.com
www.facebook.com/pure

Printed on 100% recycled paper

103JP